



# BioVex® Disinfecting Solution For Schools and Universities Applications

BioVex® provides schools and universities a safe and convenient system to reduce the spread of blood borne pathogens and communicable infections from non-porous surfaces throughout their facilities.

The proprietary blend of oxychloro chemistry of BioVex® provides disinfection by attacking the surfaces of microbes and breaking them down. It works immediately on contact, and remains working until dried. No residual active compound is left behind so no rinsing is required. BioVex® is also an excellent deodorizer.

BioVex® is designed to be diluted with a fixed amount of water to create an affordable yet effective sanitizer that can be used daily, or more often on problem contact areas or in special target areas.

The simple system only requires that the included activator be mixed with the BioVex® concentrate in its container. After a few seconds of mixing, the activated concentrate is then added to tap water as directed. It is then ready to go to work solving your sanitation challenges.




## BioVex® is used in the following areas for disinfection and odor control:

- |                             |                         |
|-----------------------------|-------------------------|
| Classrooms & Cafeterias     | Dormitories & Restrooms |
| Locker Rooms and Showers    | Auditorium              |
| Gym Mats, Workout Equipment | School Clinic           |

BioVex® is often used to treat chairs, beds, benches, floors, walls, medical equipment, workout equipment, restrooms, showers, pools, and a broad range of other applications.

## Concentrate Properties

- Concentration: 2.00 – 2.10% available chlorine dioxide
- pH: 8.2 – 8.5
- Solubility in Water: Complete
- Very Low Acute Toxicity (EPACAT III)
- Non-Flammable, Non-Explosive, Stable Solution

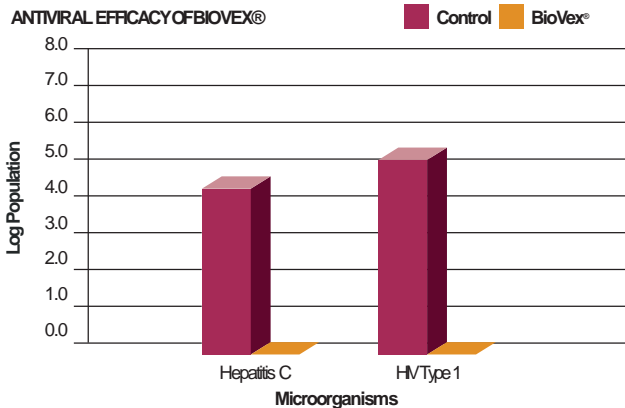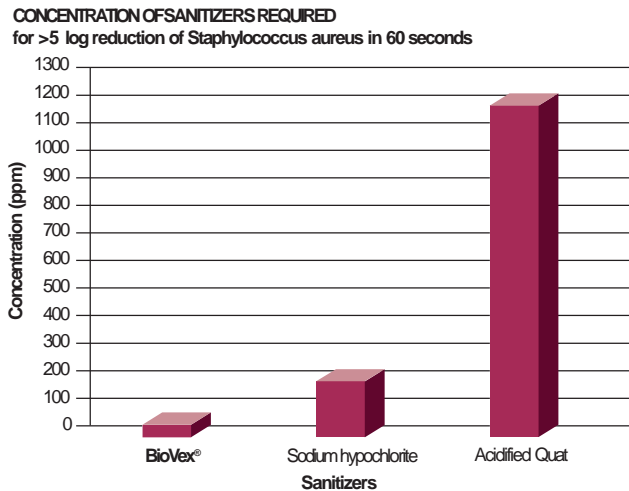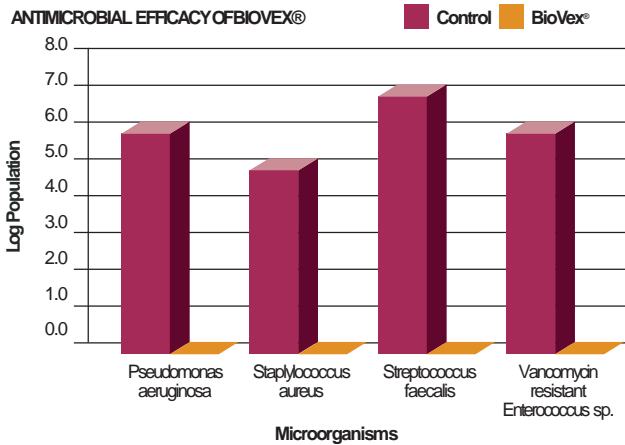

[www.Bio-Cide.com](http://www.Bio-Cide.com)  
 2650 Venture Dr., Norman, OK 73069  
 405.329.5556 • 405.329.2681 fax • 800.323.1398  
 Bio-Cide International is ISO 9001:2008 certified

Authorized Service Provider:



424 Old Candia Road  
 Candia, NH, 03034  
 603-483-0199  
[www.FilterShineNewEngland.com](http://www.FilterShineNewEngland.com)

## Comparison of BioVex® with Other Conventional Sanitizing Agents


	BioVex®	Sodium and Calcium Hypochlorite	Glutaraldehyde	Iodophors	Quaternary Ammonium Compounds (409, Lysol, etc.)	Peracetic Acid
<b>Performance</b>	High	Moderate	Moderate to High	Moderate	Moderate to High	Moderate
<b>Contact Time</b>	Minutes	Minutes to Hours	30 Minutes to Several Hours	Minutes to Hours	Minutes to Hours	Minutes
<b>Concentration</b>	500 ppm	1,000 ppm to 1.0%	500 ppm to 1.0%	500 ppm to 1.0%	100 ppm to 1.0%	30-200 ppm
<b>pH</b>	Near Neutral	Alkaline	Neutral	Neutral to Acidic	Acidic to Neutral	Acidic
<b>Corrosiveness</b>	Negligible	Corrosive to Iron and Aluminum	Negligible	Corrosive to Iron and Stainless Steel	Corrosive to Iron, Copper, and Brass	Corrosive to Iron
<b>Toxicity</b>	Negligible	Harmful to Tissues	Can Cause Skin Irritation	Variable, Iodine is Extremely Toxic	Can Cause Skin Irritation	Skin and Mucous Membrane Irritation
<b>Biodegradability</b>	High	Moderate to Low	Moderate to High	Low	Low	High
<b>Cost</b>	Low to Moderate	Low	Moderate to High	Moderate to High	Moderate to High	High

### BioVex® Mixing Instructions

(please read and follow all package directions)


#### One Gallon

Add one (1) packet of activator (Green "G") to one (1) 3.25 oz. package of BioVex® liquid concentrate chemistry. Replace cap securely. Shake vigorously and invert bottle multiple times. Add to one (1) gallon container and fill with water. The product is now ready to use.

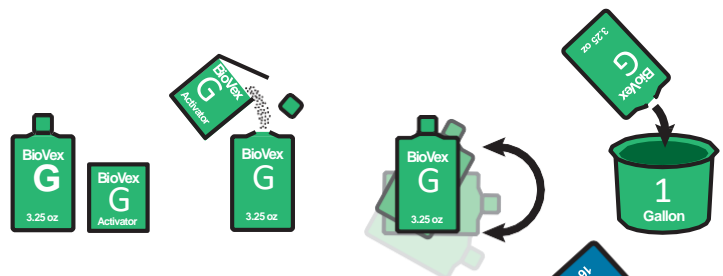

#### Five Gallons

Add one (1) packet of activator (Blue "T") to one (1) 16 oz. package of BioVex® liquid concentrate chemistry. Replace cap securely. Shake vigorously and invert bottle multiple times. Add to one (5) gallon container and fill with water. The product is now ready to use.

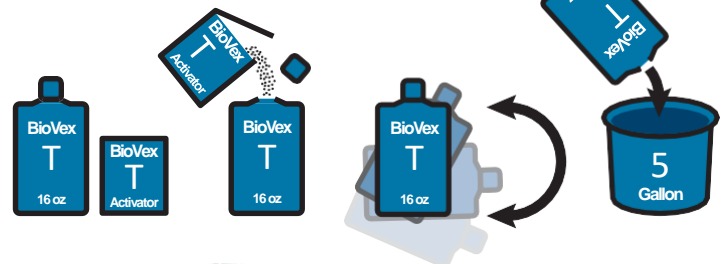

### BioVex® High Volume Station (HVS):

- HVS is a low cost system that eliminates the need for manual mixing and diluting and ensures consistent activation every time.
- Efficiency is increased by automatically refilling the solution reservoir with fresh active product as needed. This eliminates manual mixing, measuring, and spills.
- No electricity needed. The HVS is water-powered.
- With only one water connection required to provide activation of BioVex®, the system is easy to install.
- Operation is not affected by changes in water pressure or flow.
- Unit is simple to install, maintain, and adjust.
- Exposure to concentrated product is safely eliminated.
- On-demand dispensing eliminates waste.
- Optional stand specifically designed for the HVS is available.



HVS



WALL MOUNT HVS